




ROBATHERM

Proudly Distributed By

ROBAND 

Instruction Manual

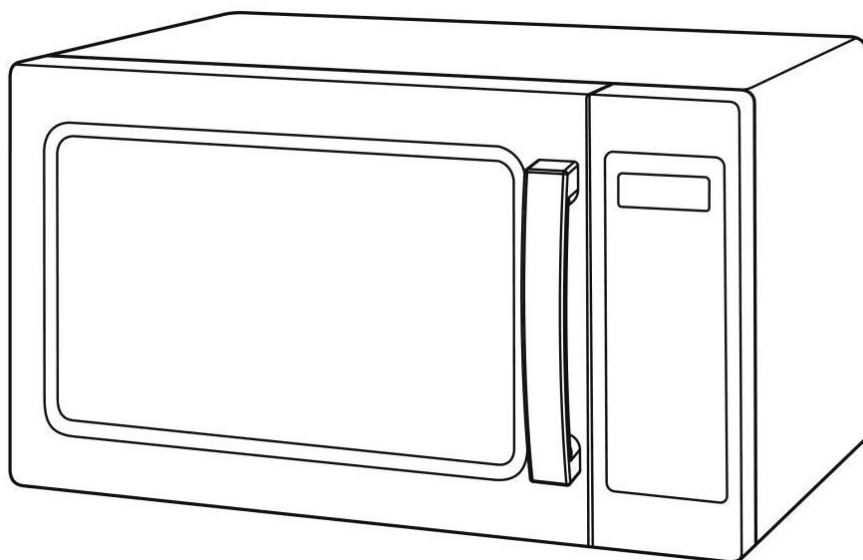

COMMERCIAL MICROWAVE OVEN

RM1129

Version 1

CONTENTS

Product Features	2
Specifications*	2
Parts Included	2
General Safety Warnings	2
Operation Safety Warnings	3
Cleaning & Maintenance	3
Installation	4
Operation	5
Power save mode	7
Mute	7
Child safety lock	8
Error codes	8
Materials suitable for use	8
Troubleshooting	8
Notes	8

PRODUCT FEATURES

- Commercial grade Stainless Steel exterior and interior.
- 29L internal capacity.
- Power level adjustable in 5 steps.
- 20 individually customisable cooking programs.
- Easy Clean interior surfaces.

SPECIFICATIONS*

Model	RM1129
Power Source	230 Volts AC ~ 50Hz
Input Power	1600 Watts
Output Power	1100 Watts
Oven Capacity	29 Litres
Oven Cavity (W x D x H)	350 x 357 x 226 mm
External Dimensions (W x D x H)	542 x 461 x 329 (includes handle and standoff)
Net Weight	18Kg

*Specifications subject to change

PARTS INCLUDED

- Microwave Oven (appropriate model)
- Instruction Manual

GENERAL SAFETY WARNINGS

Read all Instructions and safety warnings prior to use. Keep user manual for future reference.

Personnel must be trained prior to operating this appliance.

This product is suitable for commercial use only.

This machine should not be operated by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Avoid contact with the exterior of this machine as surfaces can get hot.

Do not cover or block filter or ventilation openings.

Keep power cord away from heated surfaces.

The machine should be disconnected from all power and allowed to cool before cleaning.

Regularly inspect the supply cord/plug and discontinue use immediately if damage is found.

This machine contains no user-serviceable parts. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Touching internal electrical components may cause serious injury or death, even with the microwave unplugged. Do not remove any cover unless qualified to do so.

This appliance must be returned to Roband Australia, or one of our agents to carry out repairs.

Do not remove any cover panels from the machine.

Roband will accept no liability if the instructions in this manual have not been followed

OPERATION SAFETY WARNINGS

If the door or door seals, door hinges or any part of the machine is damaged, the oven must not be operated until it has been repaired by an authorised person.

Do not operate oven without food or load in oven cavity.

Liquids and other foods must not be heated in sealed containers since they are liable to explode.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the contents.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Only use utensils that are suitable for use in microwave ovens.

Do not put metal in the microwave oven.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead

to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Ceramic Glass oven cavity base

The special Ceramic Glass oven cavity base used in the ROBAND® Microwave ovens has a high impact strength however impact from sharp objects or heavy blows to the edges can lead to breakage.

CLEANING & MAINTENANCE

CAUTION: Disconnect from power and allow to cool before cleaning.

CAUTION: Steel cutting processes used in the construction of this machine can result in sharp edges. Avoid contact with sharp edges during cleaning and maintenance.

CAUTION: Do not wipe plastic and painted sections of the oven with bleach, thinners or other cleaning agents, as this may cause these parts to dissolve or change shape.

Toxic cleaners should be avoided when cleaning the inside of the Microwave as they may contact food.

Caustic cleaners should always be avoided, as they may damage components inside and outside the unit.

This unit is not suitable for cleaning with the use of a water jet or immersion.

The door frame, seal and parts nearby must be cleaned carefully with a damp cloth when they are dirty.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door components since they can scratch the surface, causing damage to the door or shielding mesh within.

If the supply cord is damaged it must be replaced by a cord set supplied by Roband. Internal maintenance should only be performed by

Roband or one of our service agents.

Cleaning the control panel:

Do not use a detergent or an alkaline spray to clean the control panel as this may cause damage. Use a dry or a cloth lightly dampened with water to clean.

Cleaning the Microwave interior:

After use, clean up any spilled liquids, spattered oil and food as quickly as possible. If the oven is used while dirty the efficiency drops and the food may get stuck on the interior. Clean the interior with a cloth soaked in warm water with mild detergent dissolved in it, and then rinse any residue off with a damp cloth.

Regular cleaning will prevent a build-up of oils and foodstuff and keep the machine looking new.

INSTALLATION

IMPORTANT: DO NOT USE THE MICROWAVE DOOR HANDLE TO LIFT THE MICROWAVE OVEN.

Any damage to the machine as a result of freight must be reported to the Freight Company and to the agent responsible for the dispatch of machine within 24 hours of receipt. No claims will be accepted after this period.

Do not under any circumstances attempt to use a damaged product.

Remove all packaging materials, tape, and any protective plastic from the machine. Remove any glue residue from the protective plastic or tape using citrus cleaner.

Product should be installed at counter height only (approximately 800- 1100mm). Installing outside the recommended mounting height could cause damage to the door hinges and prevent operation.

Do not position the microwave on top of or immediately above another appliance.

Place the product on a firm, level surface in the desired position.

Allow at least 150mm clearance from top, back and sides when positioning the microwave.

Do not obstruct filter or ventilation openings.

Install away from TV and radio sets as reception and radio interference might be affected.

Do not position Microwave near sources of heat, water, oil or steam.

Do not stack any appliances or materials on the top of the microwave.

Do not connect to power using an power board or extension cord.

WARNING: This product must be connected to an RCD protected circuit, ensure the circuit is properly earthed.


Before connecting the machine to the power supply, ensure that all switches are in the OFF position.

OPERATION

- 1. MICROWAVE** – Indicates when the microwave is in operation.
- 2. DEFROST** – indicates defrost setting.
- 3. POWER LEVEL** – Indicates power other than 100%.
- 4. CHILD LOCK** – Indicates Child lock is active.
- 5. PROGRAM** – Setup cooking programs.
- 6. DEFROST** – For using Defrost mode.
- 7. NUMERAL PAD 0-9** – To input time or program.
- 8. CHECK PROGRAM** – To view program settings.
- 9. x2** – Double time.
- 10. POWER LEVEL** – Used to set power level.
- 11. STOP / RESET** – To stop Cooking and Reset timer.
- 12. START / +30sec** – Begin/resume cooking or quick-start 30s.

NORMAL COOKING - MANUAL OPERATION

- Place the food to be cooked or heated in a container suitable for use in a microwave then place inside the oven and close the door.
- Set Power level by pressing **'POWER LEVEL'** until desired power is displayed.
Power will cycle through 100%, 80%, 60%, 40% and 20% with each press.
Enter cooking time by pressing the numbers on the **'NUMERAL'** keypad.
- Press **'START'** to begin cooking.
- Cooking can be paused by pressing **'STOP'** once or by opening the door. To resume cooking while paused, close the door if open and or press **'START'** Note, Pressing **'STOP'** again while paused or with the door open will clear remaining time.

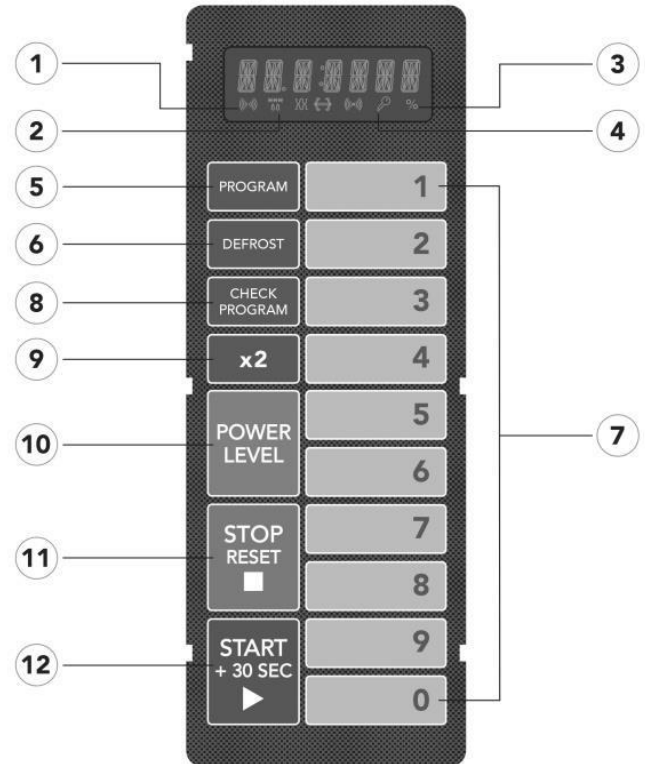

NOTE: The oven can be programmed for a maximum of 20 minutes at 100% power, and 60 minutes if 80% power or less is selected.

NOTE: Using a Low power may increase cooking time, but may produce a more uniform result in foods such as dairy and meats.

The internal cooling fan will run to prevent microwave components from overheating.

DEFROST

Defrost function cycles power intermittently to assist food to thaw evenly.

- Place the food to be defrosted in a container suitable for use in a microwave then place inside the oven and close the door.
- Press the **'DEFROST'** button
- Enter desired time using **'NUMERAL'** keypad (Max defrost time is 60 minutes)
- Press **'START'** to begin defrost

The DEFROST indicator lights on the display show the oven is in the DEFROST mode. The oven beeps during the defrosting cycle to signal that

the food needs to be turned or rearranged. When the defrosting time ends, you will hear 3 beeps.

5. Defrosting can be paused by pressing **'STOP'** once or by opening the door. To resume defrosting while paused, close the door if open and or press **'START'** Note, Pressing **'STOP'** again while paused or with the door open will clear remaining program time.

QUICKSTART

1. Place the food to be cooked or heated in a container suitable for use in a microwave then place inside the oven and close the door.
2. Press **'START'** to begin cooking with a time of 30 seconds.
3. Pressing **'START'** again while running will add 30 seconds to the timer. By pressing multiple times a maximum cooking time of 5 mins can be entered.
4. Cooking can be paused by pressing **'STOP'** once or by opening the door. To resume cooking while paused, close the door if open and or press **'START'** Note, Pressing **'STOP'** again while paused or with the door open will clear remaining program time.

Note: Quickstart always runs at 100% power

PROGRAMMED MENU

The microwave can store up to 20 Pre-Programmed Time / Power sequences.

1. Place the food to be cooked or heated in a container suitable for use in a microwave then place inside the oven and close the door.
2. Select a pre-programmed sequence using the **'NUMERAL'** pad to call up the desired program. To select program 10-20, touch the **'NUMERAL'** pad twice rapidly, e.g. 1-1 = program 11, 2-2 = program 12, 3-3 = program 13 etc.

The oven will automatically begin the programmed cook sequence after a short pause.

Note, if no program has been entered into a program position **"NO DATA"** will show on the display.

3. Cooking can be paused by pressing **'STOP'** once or by opening the door. To resume cooking while paused, close the door if open and or press **'START'** Note, Pressing **'STOP'** again while paused or with the door open will clear remaining program time.

Pre-Programmed Cooking Times and Power Level:

Number	Cooking Time	Power Level
1	0:10	100%
2	0:20	100%
3	0:30	100%
4	0:45	100%
5	1:00	100%
6	1:30	100%
7	2:00	100%
8	3:00	100%
9	4:00	100%
0	5:00	100%

Note: the above programmed times and power levels can all be changed if desired.

ENTERING A NEW PRE-PROGRAMMED SEQUENCE

1. Press **'PROGRAM'** button. The display will read **"PROGRAM"**
4. Select a program number using the **'NUMERAL'** pad to call up the desired program. To select program 10-20, touch the **'NUMERAL'** pad twice rapidly, e.g. 1-1 =

program 11, 2-2 = program 12, 3-3 = program 13 etc.

2. Press **'POWER LEVEL'** to select the desired power level.
3. Enter time required using the **'NUMERAL'** keypad.

The display will show **"STAGE 2"**

4. Press **'START'** to save program, press **'STOP'** to exit without saving, after saving press **'STOP'** to exit program function.

PROGRAMMED MENU - STAGED COOKING

Staged cooking sequences can also be saved to the programmed menu. A staged program will cook in 2-3 sequential time/Power stages.

1. Press **'PROGRAM'**
2. Enter the program number to be changed. To select program 10-20, touch **'NUMERAL'** pad twice rapidly, e.g. 1-1 = program 11, 2-2 = program 12, 3-3 = program 13 etc..

1. Press **'POWER LEVEL'** to select the desired power level.
2. Enter time for Stage 1 using numeral keypad.

The display will show **"STAGE 2"**

3. Press **'POWER LEVEL'** again until desired power level for Stage 2 is displayed.
4. Enter time for Stage 2 using **'NUMERAL'** keypad.
5. Repeat Step 3 and 4 if a 3rd Stage is required.
6. Once Power and time settings have been entered for required stages press **'START'** to save or **'STOP'** to cancel programming.
7. When a staged program is run the microwave will run through each stage automatically without user input. The display will show total time for all stages.

CHECK PROGRAM

Time and power settings for the Programmed menu buttons can be checked using this function.

1. Press **'CHECK PROGRAM'**
2. Enter the number (1-20) of the program you want to check.
3. Display will show the time and power settings for each stage stored to the program entered.
4. Press **'STOP'** to end.

DOUBLE QUANTITY

By selecting **'x2'** you can temporarily double the cooking time of a previously entered program.

1. Place the food to be cooked or heated in a container suitable for use in a microwave then place inside the oven and close the door.
2. Press **'x2'**
3. Enter desired programmed menu number using the **'NUMERAL'** pad. The oven will automatically begin the programmed cooking sequence after a short pause.

Note: The extended cooking time cannot exceed maximum cooking time of 60 minutes, or 20 minutes at full power.

POWER SAVE MODE

The display can be turned off when idle to save power. To activate, press and hold **'CHECK PROGRAM'** for 5 seconds. When in Powersave mode open the door or press any button to wake the microwave. Once awake the microwave will operate as usual. To deactivate Powersave, press any **'NUMERAL'** button then press and hold **'CHECK PROGRAM'** for 5 seconds.

MUTE

Stops beep when buttons are pressed. To activate press and hold **'x2'** for 5 seconds.

To deactivate mute press and hold 'x2' for 5 seconds.

CHILD SAFETY LOCK

To activate press and hold 'STOP' for 5 seconds. Unit is now locked and cannot be used until it is unlocked. To unlock press and hold 'STOP' again for 5 seconds.

ERROR CODES

E10: Maximum cooking time exceed in staged cooking. Total maximum cooking time is 20 minutes at 100% power or 60 minutes in other power levels. Press 'STOP' to clear.

E20: Program menu data unable to read or write.

MATERIALS SUITABLE FOR USE

- Items containing metal should not be used in the microwave as they may cause sparking. Even a small amount of metal plating on the edge of dishes and cups can cause sparking and should not be used.
- Combustible materials such as paper should be used with caution as they may ignite. Use only for short cooking times and only while attended.
- Plastic foam should not be used in the microwave as it may melt and contaminate food.
- Use only products marked as microwave safe for ceramic, glass and plastic products.

TROUBLESHOOTING

Only after all points below have been checked should you call for service:

If the Microwave is not working:

- ✓ Check that the machine is plugged into the power point correctly and the power is switched on and working.

- ✓ Check that the door is properly closed and not obstructed by food or any object.

If the Microwave is sparking in the cavity:

- ✓ Check that there are no metal utensils, metal containers or dishes with metal trim being used.

NOTES

WARRANTY

The warranty conditions set out below are in addition to any warranties implied or governed by law.

Roband Australia warrants that this appliance shall be delivered free from defects in material and workmanship. The warranty for this product is offered to the original purchaser, to be free of fault in both workmanship and materials for a period of 12 months from date of purchase. Roband's obligations pursuant to this warranty are limited to the repair or replacement of the defective goods or materials, at its discretion and subject to the terms contained within this Warranty statement.

The following conditions apply:

The product must be installed, maintained and used under normal operating conditions within the scope of the operating instructions.

All warranty claims must be submitted to Roband or an authorised Roband dealer, and Roband authorisation must be granted prior to repairs being carried out. Proof of purchase is required for any repair authorisation.

Warranty is back to base, meaning delivery to and collection of your product to Roband or an authorized service agent is the responsibility of the purchaser.

Where a product cannot be returned back to base, on-site warranty can be arranged by prior agreement.

The following exclusions apply:

Claims or faults arising from misuse, neglect, transport damage or other mechanical damage, including but not limited to; door's, hinges & interlock switches etc., other than those arising from manufacture or material defects. Where relevant, glass, Teflon® and lamps are not included in this warranty and RCD tripping due to moisture absorption by Tubular Heating Elements is not a warranty fault.

Roband or any subsidiary company or Agent shall not be liable for loss of profit or damage to other equipment and property except where it is in breach of the guarantees provided in accordance with applicable legislation.

Roband reserves the right to reject a warranty claim if it is not satisfied with the circumstances under which the fault occurred or where a product has been altered from its original specification.

For on-site repairs outside of capital city metropolitan areas, travel costs, service callout fee and related labour costs etc. are the responsibility of the claimant.

Any costs incurred for false claims or faults due to incorrect usage etc. are the responsibility of the claimant.

Any attempt to repair the product by non-Roband approved service personnel or the use of non-genuine parts will void the warranty agreement

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For the name of your nearest Australian authorised service agent, please contact:

Roband Australia Pty Ltd

1 Inman Road,
Cromer, NSW, 2099, Australia,

Warranty: 1800 268 848

Tel: +61 2 9971 1788

Email: sales@roband.com.au

Web: www.roband.com.au

For your nearest International distributor, please visit:

<https://www.roband.com.au/worldwide/>

© Copyright 2021 – Roband® Australia Pty Ltd

All rights reserved. No part of this work may be reproduced or copied in any form or by any means, electronic or mechanical, including photocopying or posting to a website, without the written permission of the publisher. The material contained within this document is intended entirely for instructional Purposes. Roband® Australia is a wholly Australian owned company and has been manufacturing quality commercial catering equipment for the food service industry for more than 60 years.